

## Instructions for Line Voltage Switching: 115VAC 60Hz <> 230VAC 50Hz

### Circles of Magnetism

- For 115VAC:  
Set Line Voltage Switch on Power Supply Chassis to '115'.
- For 230VAC:  
Set Line Voltage Switch on Power Supply Chassis to '230'.