

## AFTERIMAGE

### MAINTENANCE INSTRUCTIONS

#### GENERAL INFORMATION:

Afterimage uses a photographer's strobe triggered by a button on the top of the exhibit.

The outside of the exhibit is made of epoxy-painted steel and Delrin and may be cleaned with soap and water.

#### CLEANING THE WINDOWS:

The viewing windows are made of Plexiglas and may be cleaned with Plexiglas cleaner. To clean the Plexiglas, remove the top of the exhibit by unscrewing the two Allen head screws on the top of the exhibit.

The Plexiglas is attached to the bottom of this block .

#### ACCESSING THE STROBE:

The strobe unit is accessed by removing the top block of the exhibit and sliding the round bar out, keeping track of its orientation. Next, loosen the set screw at the bottom of the push-button bezel and unscrew the bezel while holding the switch. Holding the switch, pull on the knob which is attached to the threaded rod in one corner of the exhibit while feeding the power cord into the exhibit from the bottom. Slide the entire internal assembly out the top of the exhibit.

Reassembly is the reverse of this sequence. Note that the setscrew in the switch bezel fits into a hole in the exhibit.